

Montering FL085mm



Tilslutning motor print BLOWER

N

L1

| | Capacitor uF | kW | Effekt lav A | Effekt midt G | Effekt høj B |
|--------------|-----------------|-------------|-----------------|------------------|-----------------|
| EBM 85 | N/A | 16kw | 30 | 60 | 100 |
| EBM 85 | 1,0 | 24kw | 30 | 60 | 100 |
| EBM 108 | 1,0 | 16kw | 15 | 18 | 22 |
| EBM 108 | 1,0 | 24kw | 15 | 25 | 35 |
| EBM 108 | 1,5 | 16kw | 12 | 15 | 20 |
| EBM 108 | 1,5 | 24kw | 12 | 23 | 35 |
| EBM 108 | 1,5 | 30kw | 12 | 28 | 45 |
| Ecofit 108 | 1,5 | 16kw | 5 | 10 | 15 |
| Ecofit 108 | 1,5 | 24kw | 5 | 12 | 20 |
| Ecofit 108 | 1,5 | 30kw | 5 | 14 | 25 |
| Rebeck 108 | 1,5 | 16kw | 12 | 15 | 18 |
| Rebeck 108 | 1,5 | 24kw | 12 | 17 | 22 |
| Rebeck 108 | 1,5 | 30kw | 12 | 18 | 25 |
| Rebeck 97 | 1,0 | 16kw | 12 | 16 | 20 |
| Rebeck 97 | 1,0 | 20kw | 12 | 17 | 22 |
| Rebeck 97 | 1,0 | 24kw | 12 | 18 | 24 |
| Rebeck 97 | 1,0 | 30kw | 12 | 20 | 28 |
| FL085 | N/A | 10kw | 15 | 21 | 27 |
| FL085 | N/A | 20kw | 15 | 25 | 35 |
| FL085 | N/A | 30kw | 20 | 40 | 60 |



Tallene er kun vejledende !

Sidder trøpille brænderen på en kedel med rensesystem, bør blæser parametrene hæves med ca. 20%.