

# Montering REBECK 97mm



## Tilslutning motor print BLOWER



PE

 
N

L1

L2



## Tilslutning motor print BLOWER / CAP



Blower cap

Blower cap

	Capacitor uF	kW	Effekt lav A	Effekt midt G	Effekt høj B
EBM 85	N/A	16kw	30	60	100
EBM 85	1,0	24kw	30	60	100
EBM 108	1,0	16kw	15	18	22
EBM 108	1,0	24kw	15	25	35
EBM 108	1,5	16kw	12	15	20
EBM 108	1,5	24kw	12	23	35
EBM 108	1,5	30kw	12	28	45
Ecofit 108	1,5	16kw	5	10	15
Ecofit 108	1,5	24kw	5	12	20
Ecofit 108	1,5	30kw	5	14	25
Rebeck 108	1,5	16kw	12	15	18
Rebeck 108	1,5	24kw	12	17	22
Rebeck 108	1,5	30kw	12	18	25
<b>Rebeck 97</b>	<b>1,0</b>	<b>16kw</b>	<b>12</b>	<b>16</b>	<b>20</b>
<b>Rebeck 97</b>	<b>1,0</b>	<b>20kw</b>	<b>12</b>	<b>17</b>	<b>22</b>
<b>Rebeck 97</b>	<b>1,0</b>	<b>24kw</b>	<b>12</b>	<b>18</b>	<b>24</b>
<b>Rebeck 97</b>	<b>1,0</b>	<b>30kw</b>	<b>12</b>	<b>20</b>	<b>28</b>
FL085	N/A	10kw	15	21	27
FL085	N/A	20kw	15	25	35
FL085	N/A	30kw	20	40	60



*Tallene er kun vejledende !*

Sidder træpille brænderen på en kedel med rensesystem, bør blæser parametrene hæves med ca. 20%.